 


Start Here

EPSON Stylus® CX5400

1 Unpack

- 1** Make sure you have all the parts shown here. If any parts are missing, contact EPSON as described on the back of this sheet.

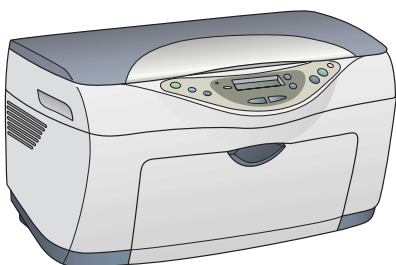

 
EPSON Stylus CX5400




Software
CD-ROM



Quick Reference
Guide

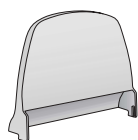


Paper support

 

USB cable





 Ink cartridges

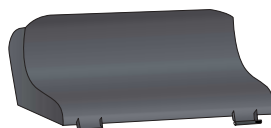


Feeder guard

  - 2** Remove all tape, as shown.

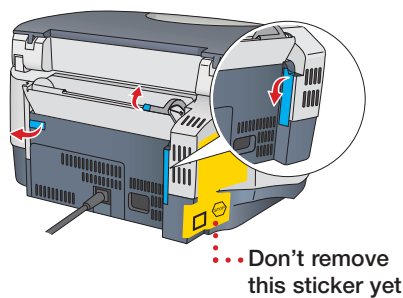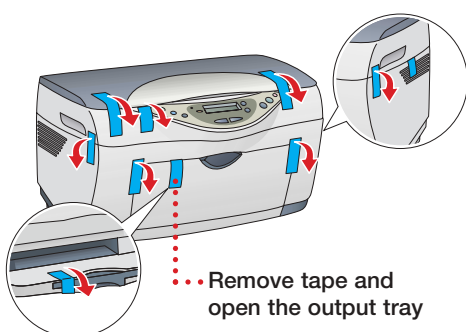


Note: There may be packing materials or tape in different locations.

 
- 3** Lift up the entire scanner unit. If it doesn't open, make sure you have removed all the tape.

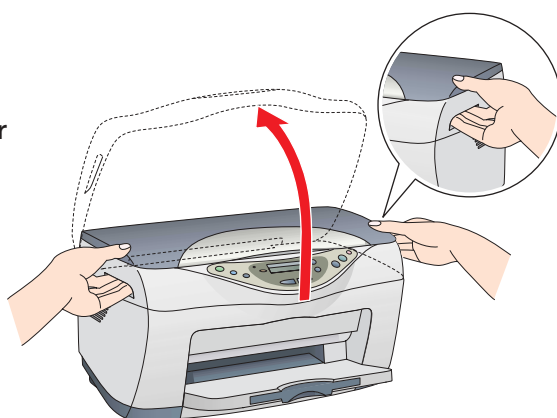

 - 4** Peel off the tape from the ink cartridge holder and from the top of the printer. Make sure you don't leave any tape inside.

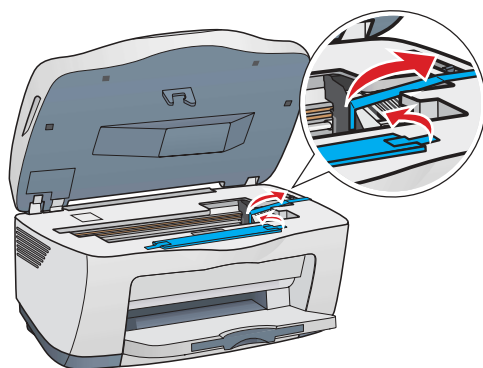


- 5** Lower the scanner unit.

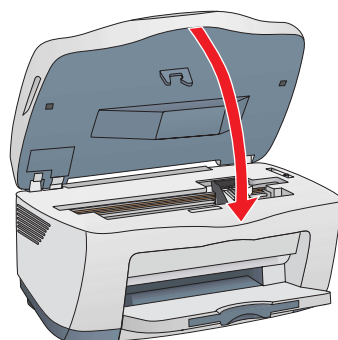 

2


Unlock

 - 1 Open the scanner lid, as shown. Remove any packing materials under the lid.

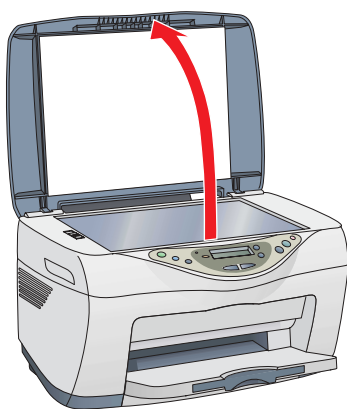

- 2 Slide the transportation lock to the  unlocked position.

 Caution: Make sure you unlock the scanner, or it won't work.

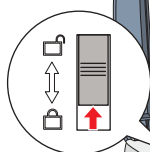


- 3 Close the scanner lid.


3

Attach the Parts

 - 1 Set the feeder guard into its two slots at the back of the Stylus CX.

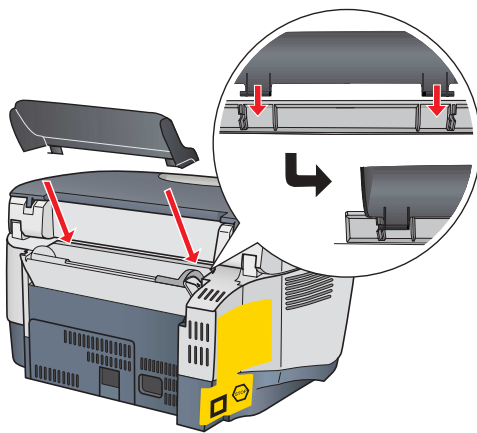

 
- 2 Insert the paper support into its two grooves behind the feeder guard.

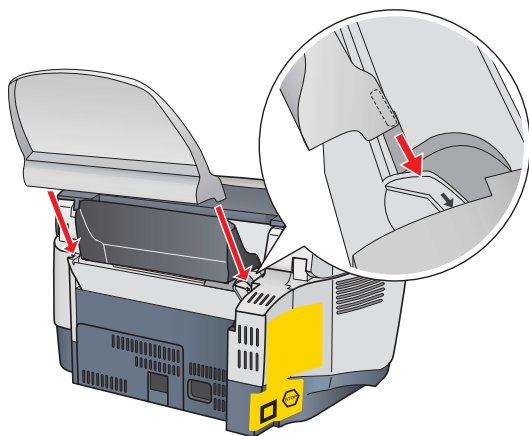


4

Plug In and Turn On

 - 1 Plug the Stylus CX into a grounded electrical outlet. Do not connect the USB cable yet.

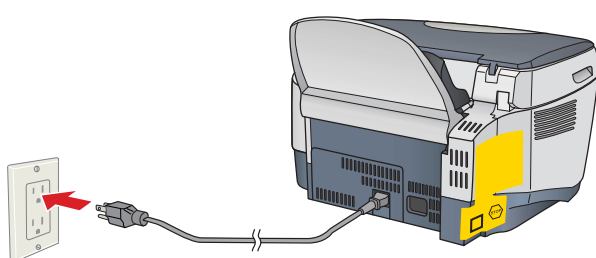

 
- 2 Press and hold the On button until the green light comes on.

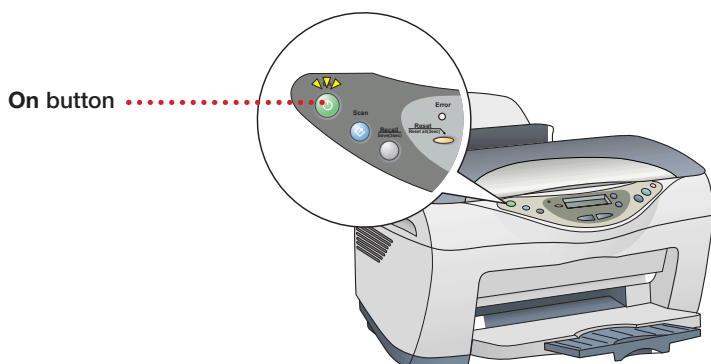


5

Install Ink Cartridges

 - 1 Lift up the entire scanner unit.

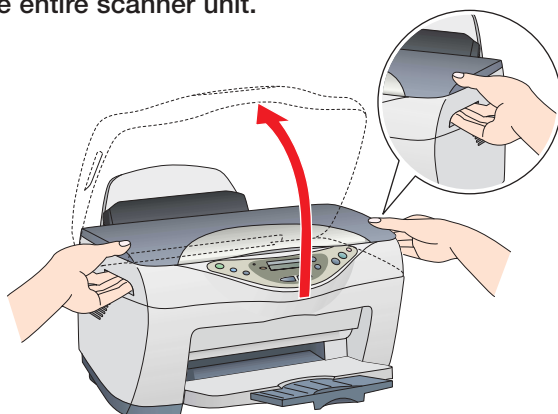

 
- 2 Shake the package of ink cartridges four or five times. Then remove the cartridges from the package.

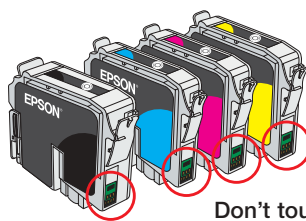


Don't touch the green part

Caution: You must install all cartridges and leave them installed for all types of printing. To avoid damaging the Stylus CX, never move the print head by hand.

 - 3 Lower each cartridge into its holder as shown.

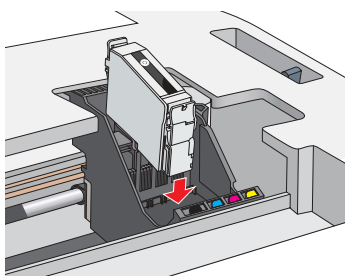

 
- 4 Press down on each cartridge until it is firmly seated.

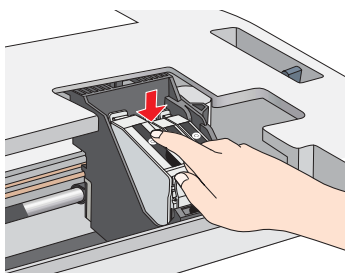

continue

continued

 - 5** Lower the scanner unit.

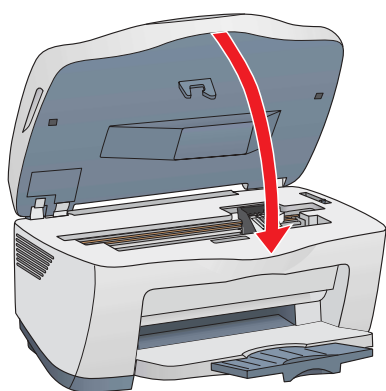


The Stylus CX begins charging the ink delivery system.


Charging takes about 2 minutes. The green light flashes and the Stylus CX makes various sounds. Don't turn it off while the green light is flashing or you'll waste ink.

6 Load Paper

 
- 1** Flip the feeder guard forward.

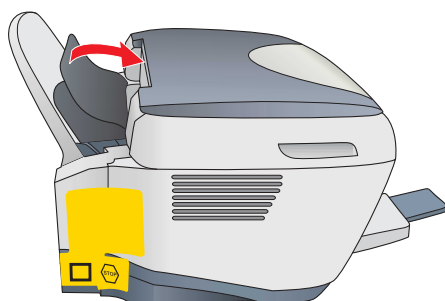


- 2** Slide out the edge guide.

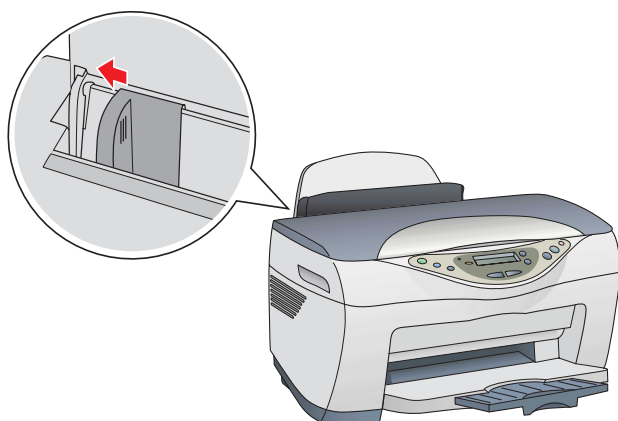 

 - 3** Place a stack of paper against the right side of the feeder, but don't push it in. Slide the edge guide against the paper.

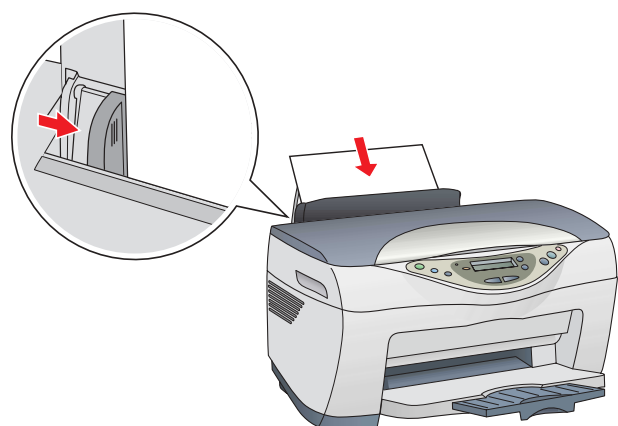

 - 4** Flip the feeder guard back over the stack of paper.

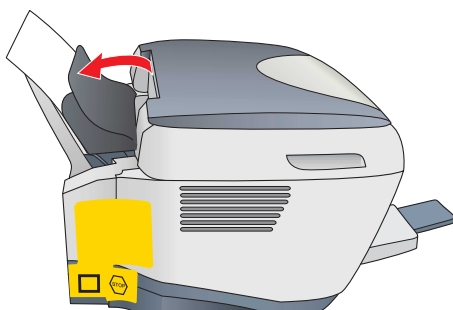


Install Software and Connect to Your Computer

The software works with Windows® 98, Me, 2000, and XP, and Macintosh® OS 8.6 to 9.2.2 and 10.2.x. Follow the steps below (for Windows), or the steps in the next column (for Macintosh).

Windows


- 1 Make sure the Stylus CX is not connected to your computer, then turn on your computer.

 Note: If your Stylus CX is turned on and connected to your computer, you may see several New Hardware Wizard screens. Click **Cancel** for each of these screens and disconnect your Stylus CX. You can't install your software that way.

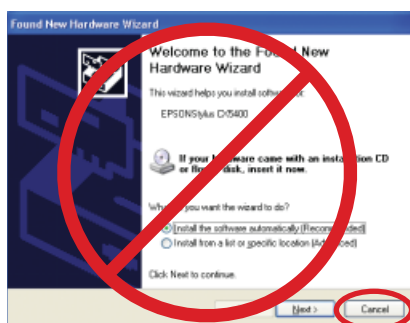

- 2 Insert your Stylus CX CD-ROM in your CD-ROM or DVD drive.

 - 3 When you see the message about disabling your antivirus software, click **Continue**.

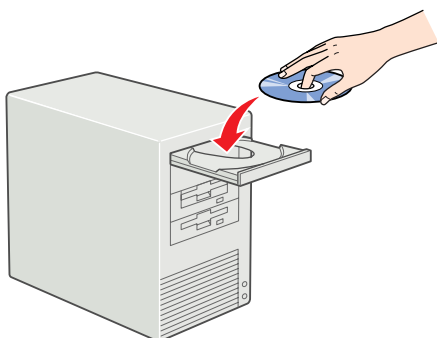


- 4 Read the license agreement, then click **Agree**. The Software Installation screen opens automatically.

- 5 Click **Install**.



Note: If the install screen doesn't open automatically, do the following:

For Windows XP: click **Start** > **My Computer**. Then double-click the EPSON CD-ROM icon.

 For Windows 2000/Me/98: double-click **My Computer**. Then double-click the EPSON CD-ROM icon.

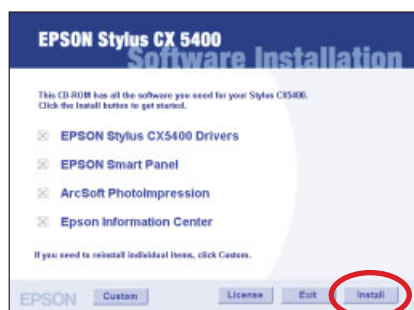


  - 6 When you see this screen, make sure your Stylus CX is turned on, then remove the sticker from the USB port.

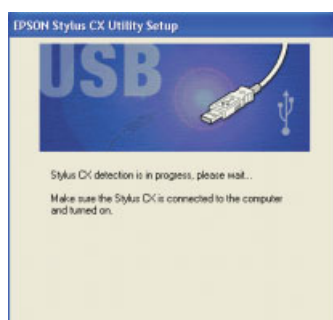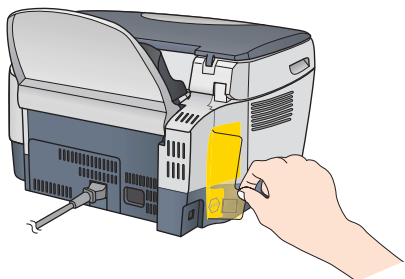

- 7 Connect the flat end of the USB cable to any available USB port on your computer.

 - 8 Connect the square end of the USB cable to your Stylus CX USB port.

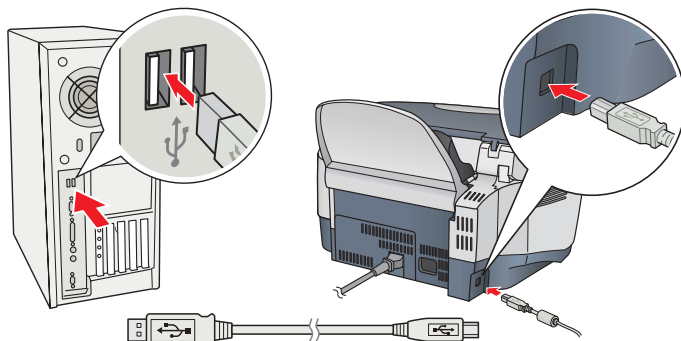

After you connect your Stylus CX, Windows displays several messages as it detects your device. If you don't see the messages, make sure your Stylus CX is turned on.

continued

- Continue following the instructions on the screen to install the rest of your software, including ABBYY® FineReader® Sprint and ArcSoft® PhotoImpression.™

 
Note: It will take several minutes to install the remaining software. Don't cancel the installation.

- At the end of the installation, click **Exit**.
- When you see the Product Registration screen, register your Stylus CX as instructed. At the last screen, click **Done** or close your browser.
- Remove the CD-ROM.

Now you're ready to copy, scan, and print. See the *Quick Reference Guide* or your on-screen *EPSON Information Center* for instructions.

Macintosh

- Remove the sticker from the USB port on the Stylus CX.
- Connect the flat end of the cable to any USB port on your Macintosh, then connect the square end of the USB cable to the USB port on the Stylus CX.

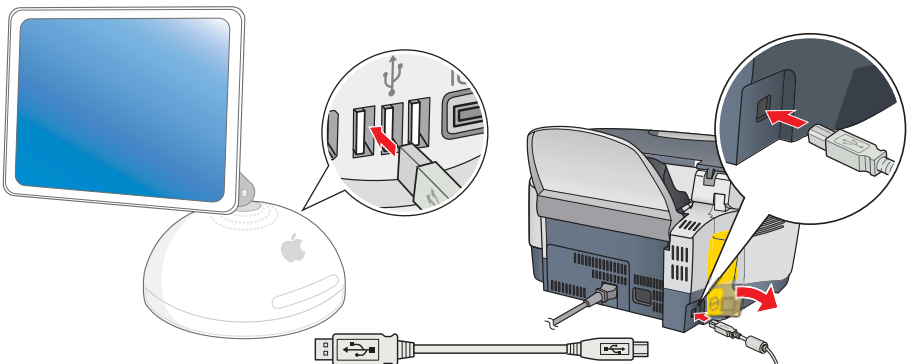


- Insert the EPSON Stylus CX5400 CD-ROM in your CD-ROM or DVD drive.
- Double-click the **EPSON** CD-ROM icon.
- If you are using Mac OS X, double-click the **Mac OS X** folder, then double-click the **EPSON** icon.

If you are using Mac OS 8.6 to 9.x, double-click the **EPSON** icon.
- When you see the message about disabling your antivirus software, click **Continue**.
- When you see the license agreement, click **Agree** to continue.

- At the Software Installation screen, click **Install**. Enter your Administrator name and password if necessary.

 Note: If you're installing on Macintosh OS 8.6 to 9.x, you may see a prompt to update your Carbon Library. After the CarbonLib installation is complete and you've restarted your system, double-click the **EPSON** icon, then click **Install** to continue the installation.

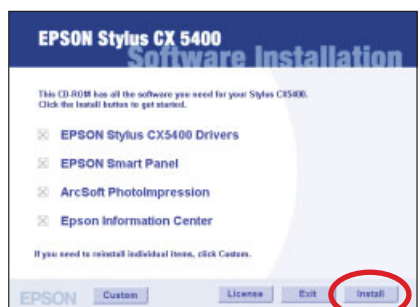


- Follow the on-screen instructions to install the software, including ABBYY® FineReader® Sprint and ArcSoft® PhotoImpression.™
- At the end of the installation, click **Exit**.
- When you see the Product Registration screen, register your Stylus CX as instructed. At the last screen, click **Quit** or close your browser.
- Remove the CD-ROM and restart your Macintosh to fully activate the Stylus CX.

Follow the instructions in the next column to add the Stylus CX to the Print Center (for OS X). If you're using OS 8.6 to 9.x, follow the instructions in the next column to select the Stylus CX in the Chooser.

Adding the Stylus CX to Print Center for Mac OS X

- 1 Open the OS X Applications folder, then open the Utilities folder and double-click **Print Center**.

 If you see this screen, click **Add**.

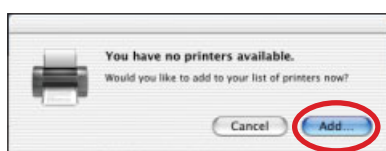


- 2 If the Stylus CX5400 already appears in the printer list, click it, then click **Add**.

If the Stylus CX5400 doesn't appear in the printer list, make sure it is connected and turned on. Then click **Add**.


- 3 Select **EPSON USB** at the top of the next screen.

 - 4 Click **Stylus CX5400**. The Page Setup pull-down menu at the bottom of the screen becomes active.

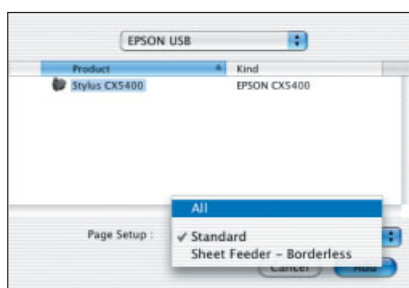

- 5 Open the **Page Setup** pull-down menu and select **All**.

 - 6 Click the **Add** button. You see the Printer List again with the Borderless feature available.

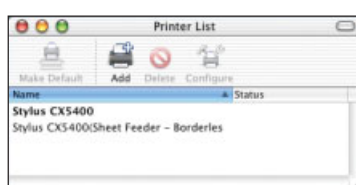


- 7 Close Print Center. You're ready to copy, scan, and print.

- 8 Now start up your Macintosh in OS 9.x. Follow the instructions in the previous column to install the OS 9.x drivers and optional software for Macintosh Classic programs.

Selecting the Stylus CX in the Chooser for Mac OS 8.6 to 9.x

- 1 Open the Chooser from the Apple menu. Select **CX5400**, then select your USB port and turn on background printing.

 - 2 Close the Chooser. You're ready to copy, scan, and print.

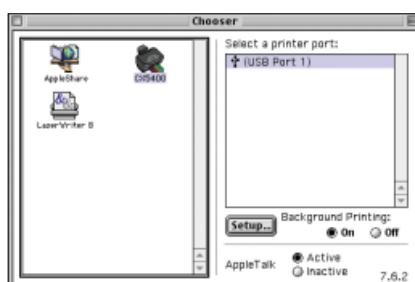

Any Problems?

If the red **Error** light is on, check the message on the Stylus CX. Try turning the Stylus CX off and then back on to clear the error. If your problem is listed here, try these suggestions. For more information, see your software Help, *Quick Reference Guide*, or your on-screen *EPSON Information Center*.

The Found New Hardware Wizard appears on your screen.

Click **Cancel** and follow the steps in section 7. Disconnect the Stylus CX before installing the software.

You see an error message when you try to print or scan.

Make sure your Stylus CX is connected to your computer, plugged into a power source, and turned on.

The Stylus CX doesn't work.

Make sure you removed the tape from the ink cartridge holder, as described in section 1. Turn the Stylus CX off and then on again.

Slide the transportation lock under the lid to unlock the scanner. See section 2.

Make sure the ink cartridges are pushed all the way down.

Make sure you're using the USB cable that came with your Stylus CX. Try connecting it to a different USB port on your computer.

Make sure your EPSON Stylus CX5400 software is installed correctly.

Any Questions?

Here's where to look for answers:

EPSON Stylus CX 5400 Quick Reference Guide

On-screen EPSON Information Center

Double-click the  EPSON Information Center icon on your desktop to view Print Show animations and your *EPSON User's Guide*.



On-screen Help for EPSON Smart Panel,™ ArcSoft™ PhotolImpression,™ EPSON Scan, and ABBYY FineReader Sprint.

Click the **Help** button or question mark that appears on the screen when you're using any of these programs.

EPSON Technical Support

- **World Wide Web**
<http://support.epson.com>
- **Automated Telephone Services**
To use these services, you must have a touch tone telephone and call (800) 922-8911. Your EPSON SoundAdviceSM Express Code is 70465. Use this code to quickly select your product in SoundAdvice.
- **To Speak to a Technical Support Representative**
Dial (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Toll or long distance charges may apply.

Software Technical Support

Software	Telephone	Fax	Internet and E-mail
EPSON Smart Panel	(510) 445-8616	(510) 445-8601	tech@newsoftinc.com
ArcSoft PhotolImpression	(510) 440-9901 8:30 AM to 5:30 PM, PT Monday–Friday	(510) 440-1270	www.arcsoft.com support@arcsoft.com
ABBYY FineReader Sprint	(510) 226-6719	(510) 226-6069	www.abbyyusa.com support@abbyyusa.com

Need Paper and Ink?

For the best prints and copies, use genuine EPSON ink and paper. You can buy them from your local store or from the EPSON StoreSM at (800) 873-7766 or www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

Look for these cartridges and paper:



T032120
Black Ink
Cartridge

T042220
Cyan Ink
Cartridge

T042320
Magenta Ink
Cartridge

T042420
Yellow Ink
Cartridge



Premium Bright White Paper

Ultra-smooth white paper perfect for everyday use—especially two-sided documents.



DURABrite® Ink Glossy Photo Paper

Heavier weight paper for long-lasting enlargements and snapshots. You can load up to 20 sheets at a time, glossy side up. Choose the **DB Photo Paper** setting.



Double-Sided Matte Paper

The ideal paper for high quality printing of brochures, newsletters, or flyers. Choose the **Matte Paper HW** setting.

EPSON and EPSON Stylus are registered trademarks and EPSON Smart Panel is a trademark of SEIKO EPSON CORPORATION. DuraBrite is a registered trademark, EPSON Software is a trademark, and EPSON Store and SoundAdvice are service marks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

Copyright © 2003 by Epson America, Inc. 7/03